

BRISTON

BP17

OWNER'S MANUAL

TABLE of CONTENTS

	Page
• SAFETY INSTRUCTIONS	1
• WARRANTY	
• INTRODUCTION	2
• SETUP	
• CONNECTIONS:	
• ANALOG AUDIO INPUTS	
• ANALOG AUDIO OUTPUTS	
• HEADPHONE JACK	
• DIGITAL AUDIO INPUTS	
• WIRED REMOTE CONTROL: RS232	3
• ANALOG AUDIO OUTPUTS	
• CHASSIS GROUND CONNECTOR	
• 12V TRIGGER CONNECTOR	
• AUXILIARY IR INPUT	
• LED STATUS INDICATORS	
• REMOTE ON/OFFCONTROL	
• PROGRAMMING THE 12V TRIGGER	4
• HAND-HELD IR REMOTE CONTROL	
• PROGRAMMING THE BR2 IR REMOTE CONTROL	
• SENDING CODES to the BP17 via the IR REMOTE CONTROL	
• WIRED RS232 REMOTE CONTROL	
• BYPASS MODE	
• DIGITAL-TO-ANALOG CONVERTER OPTION	5
• MOVING-MAGNET PHONO STAGE OPTION	
• SPECIFICATIONS	
• FRONT & REAR PANEL DETAILS	6
• EXTERNAL DIMENSIONS & RECOMMENDED CLEARANCE ENVELOPE	7

IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus when moving it & during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.

TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE.

THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.

BRYSTON LIMITED WARRANTY

Bryston analog audio circuits are warranted to be free from manufacturing defects for twenty (20) years from the original date of manufacture. The warranty includes parts and labour.

Bryston Digital circuits and cables are warranted for five years from the original date of manufacture. The warranty includes parts and labour.

Bryston products having motorized moving parts, excluding motorized volume controls, are warranted for three years from the original date of manufacture. The warranty includes parts and labour.

Bryston will remedy the problem by repair or replacement, as we deem necessary, to restore the product to full performance. Bryston will pay shipping costs one way (usually the return portion) during the first three years of warranty coverage.

In the event of a defect or malfunction, contact Bryston's repair centers for return authorization. Products must be returned using original packaging material only. Packing material may be purchased from Bryston if necessary. This warranty is considered void if the defect, malfunction or failure of the product or any component part was caused by damage (not resulting from a defect or malfunction) or abuse while in the possession of the customer. Tampering by persons other than factory authorized service personnel or failure to fully comply with Bryston operating instructions voids the warranty. This warranty gives you specific legal rights and you may also have other rights which may vary from province to province and country to country.

As of 2006-02-22 Bryston will only warranty Bryston products purchased through authorized Bryston dealers. Bryston products with a date code of 0608 or higher (date code format is "yyww", where "yy" is the two least significant digits of the year and "ww" is the week of the year) must be accompanied by a copy of the bill-of-sale from a Bryston authorized dealer to qualify for warranty service. The warranty is transferable from the original owner to a subsequent owner as long as a copy of the bill-of-sale from the original authorized Bryston dealer accompanies the re-sale. The copy of the bill of sale to any subsequent owner need ONLY include the Name of the Bryston Authorized Dealer and the Model and Serial number of the Bryston product. The warranty will only be honored in the country of the original purchase unless otherwise pre-authorized by Bryston.

BRYSTON SERVICE in CANADA:

Postal address: **P.O. BOX 2170, Stn. Main
PETERBOROUGH, ONTARIO
CANADA K9J 7Y4**

Courier address: **677 NEAL DRIVE
PETERBOROUGH, ONTARIO
CANADA K9J 6X7**

PHONE: 705-742-5325

FAX: 705-742-0882

E-mail: cdnser@bryston.com

BRYSTON SERVICE in the USA:

**79 COVENTRY ST., Suite 5
NEWPORT, VERMONT
U.S.A. 05855-2100**

PHONE: 802-334-1201

FAX: 802-334-6658

E-mail: usaser@bryston.com

BRYSTON SERVICE outside Canada and the USA:

contact your local distributor or

CHECK OUR WEB SITE:

www.bryston.com

E-MAIL BRYSTON DIRECTLY:

cdnser@bryston.com

FAX BRYSTON DIRECTLY:

01-705-742-0882

PHONE BRYSTON DIRECTLY:

01-705-742-5325

INTRODUCTION

Thank you for purchasing a Bryston BP17 Preamplifier. We are confident it will provide you with many years of musical enjoyment. We would welcome any suggestions or comments you may have regarding the operation of your Bryston amplifier.

In the unlikely event that your amplifier may require service Bryston recommends that you retain the original shipping box and packaging material for future use if required.

SETUP RECOMMENDATIONS

You may place your BP17 Preamplifier in any convenient location. Make sure you position the amplifier to maintain a direct line-of-sight between the handheld remote and the remote sensor eye located on the front panel. If plugged in the BP17 will remain in standby indicated by the RED power LED on the front panel.

The preamplifier is powered up by engaging the power button located on the front panel of the BP17 or by depressing the *POWER* button on the handheld remote control unit. The BP17 will power-up momentarily with mute engaged, indicated by the mute LED turning red on the front panel; it will then turn off within a few seconds. The *POWER* LED will stay lit green indicating normal operation.

CONNECTIONS

ANALOG AUDIO INPUTS :

The BP17 preamp comes equipped with 7 pairs of gold plated RCA (phono) analog audio input connectors labelled: **TV, CD, AUX-1/PHONO, AUX-2/SPDIF, VIDEO, TUNER & RECORD IN**. All have an input impedance of 50K ohms

- In BP17-DA models the **AUX2 (D1/D2)** input jacks accept only SPDIF PCM bit streams. They do NOT accept analog audio input signals.
- In BP17-P models, which are equipped with a moving-magnet phono equalization module, the inputs labeled **AUX1/PHONO** accept moving magnet phono cartridge inputs. These inputs are NOT line level inputs in the BP17-P and cannot be used as such.

ANALOG AUDIO OUTPUTS :

The Bryston BP17 Preamplifier comes equipped with

3 pairs of gold plated analog RCA jacks for outputs & 1 pair of XLR balanced outputs: 2 pairs of **PREAMP OUT** jacks and 1 pair of **RECORD OUT** jacks.

RCA (phono) jack outputs:

- **PREAMP OUT**
- **RECORD OUT** not affected by volume, balance or mute controls.

XLR (3 pin male) outputs:

- **BALANCED OUTPUT**
(pin 1 gnd, pin2 positive, pin 3 negative(+))

HEADPHONE JACK:

There is a quarter inch headphone output jack available on the front panel of the Bryston BP17 Preamplifier. Inserting the headphone jack mutes **PREAMP OUT** automatically. You can adjust the volume setting of the headphones by using the volume control on the front of the BP17 Preamplifier. You may also utilize the remote control unit to adjust headphone volume. The headphones cannot be muted with the remote control unit or the front panel Mute. Only headphones with impedances of greater than 50 ohms should be used.

DIGITAL AUDIO INPUTS:

In the BP17-DA model, which contains a stereo D/A converter module, there are 4 digital audio inputs available.

Two **TOSLINK** optical inputs are selected by pressing the **D3** (TOSLINK-1) or **D4** (TOSLINK-2) buttons on the front panel (when in digital mode) or on the handheld remote.

Two **SPDIF** coaxial inputs can be connected to the BP17-DA using the RCA input jacks labeled **D1** and **D2**. To select these inputs first place the unit in digital mode by pressing the **DIGITAL ▶ Select** button on the front panel (or the *A/D* button on the handheld remote) and then press the **D1** or **D2** button on the front panel or on the remote). When the green LED above the front panel **DIGITAL ▶ SELECT** switch button is ON concurrently with either the **D1** (CD), **D2** (TUNER), **D3** (TV) or **D4** (VIDEO) LEDs, then digital mode is engaged.

Note: Whatever digital input was previously selected in *Digital Mode* will be automatically reselected upon re-entering *Digital Mode* (from *Analog Mode*). Similarly, when re-entering *Analog Mode* from *Digital Mode* the previously selected analog input will be automatically re-selected.

See also the *DIGITAL-to-ANALOG CONVERTER OPTION* section for more information.

CONNECTIONS contd.

WIRED (SERIAL DATA) REMOTE CONTROL:

There is one RS-232, one AUX IR input and two 12 volt trigger output connections as well. The RS-232 is bi-directional and allows for future software downloads from the Bryston website. It also interfaces with control systems such as Crestron and AMX.

CHASSIS GROUND:

A chassis ground thumb screw terminal is provided on the rear panel.

12 VOLT TRIGGER CONNECTOR:

These 12Vdc control outputs allow the BP17 to exert on/off control over compatible equipment. See "REMOTE ON/OFF CONTROL" for more information.

AUXILIARY IR INPUT:

This mono 1/8" (3mm) phone jack allows a direct connection to equipment whose remote control system provides an output from their infra-red LED drive circuit. The signal connected to this jack, which is expected to be a 5 volt logic level, should be $\geq 2.5\text{Vdc}$ and $\leq 10\text{Vdc}$. The *tip* of the phone jack is positive (+) and the *ring* is negative (-).

LED STATUS INDICATORS

Normally the bi-colour status indicators are RED & GREEN, but RED & BLUE status indicator LEDs are also available

BYPASS: Normally OFF; will light GREEN (or BLUE) to indicate that the currently selected input is in Bypass mode wherein the balance and mute controls are inactive and gain is unity.

MUTE: Lights RED to indicate the outputs are muted.

POWER: GREEN (or BLUE) indicates normal operation
RED indicates Standby
Blinking RED/GREEN(BLUE) a fault condition.

ANALOG ▶ Aux2 / DIGITAL ▶ Select:

In BP17-DA models: when this LED is illuminated green concurrently with either **D1**, **D2**, **D3** or **D4** LEDs, it indicates that the digital inputs **D1** (SPDIF), **D2** (SPDIF), **D3** (TOSLINK) or **D4** (TOSLINK) have been selected.

In BP17 & BP17-P models: when illumi-

nated green this LED indicates that the line level analog audio input **AUX-2** has been selected.

AUX1, CD, TUNER, TV/SAT VIDEO & RECORD:

One of these input source LEDs will light green to indicate the active input. In digital mode these LEDs will light RED if the bit stream is either absent or unacceptable.

BALANCE

When the left/right signal balance is being shifted one of these LEDs will light to indicate which channel is being attenuated. Balance can be adjusted in 1dB increments to up to -6dB in either direction.


Stepping past -6dB in either direction will mute that channel fully and the LED for that channel will turn red.

REMOTE ON/OFF CONTROL

12 VOLT TRIGGER CONNECTOR:

Two trigger outputs are provided. A 12Vdc signal is placed across the **T1** and **C** pins (either "C" pin can be used) of the **12V TRIGGERS** connector whenever the unit is fully powered up. When the unit goes into standby this voltage is removed.

A 12Vdc signal will be placed across the other pair of **12V TRIGGER** output pins (**T2** and either "C" pin)

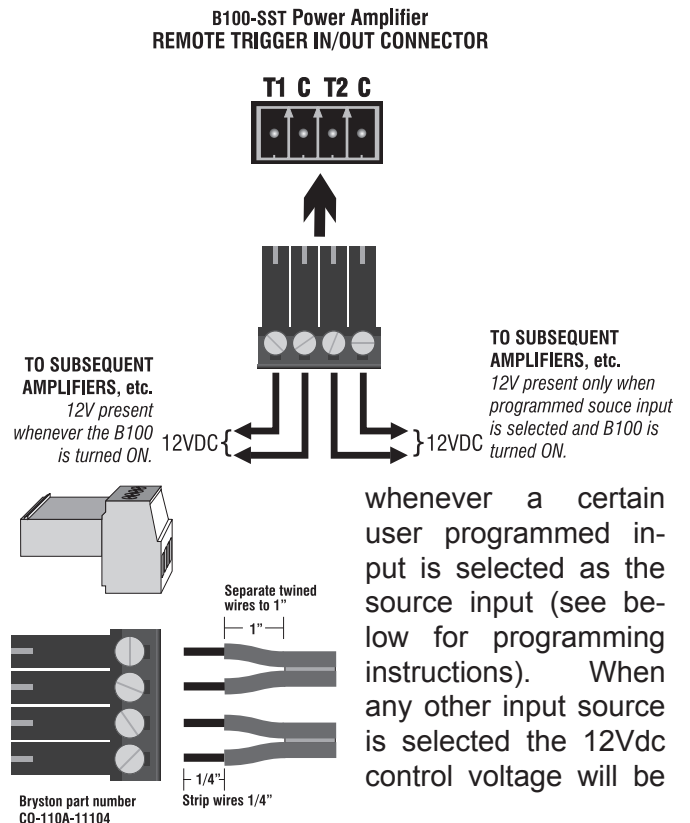

whenever a certain user programmed input is selected as the source input (see below for programming instructions). When any other input source is selected the 12Vdc control voltage will be


removed from these pins. Please note that **C** means “common” here and both **C** pins are electrically connected and identical.

PROGRAMMING the 12v TRIGGER

By default the **T2** triggered output is inactive. To program this output to become active, whereupon a control voltage of 12Vdc will appear across **T2** & **C** terminals whenever a specific source is selected, use the handheld remote control as follows:

- Select the source that you want to coincide with **T2** going active.
- While pointing the remote control at the BP17, press the **CODE** button, followed by the three digit code “247” using the keys numbered 1 through 0 in the illustration at the left. On your remote control these keys, or buttons, are labeled **AUX/PH** (2), **TUNER** (4), **D1** (7).
- The three digit code should be entered within a few seconds of pressing **CODE** button or the unit will automatically return to normal operation.
- To clear the **T2** trigger output, press the **CODE** button followed by the 3 digit code “248”: **AUX/PH** (2), **TUNER** (4), **D2** (8).

OPTIONAL IR REMOTE CONTROL

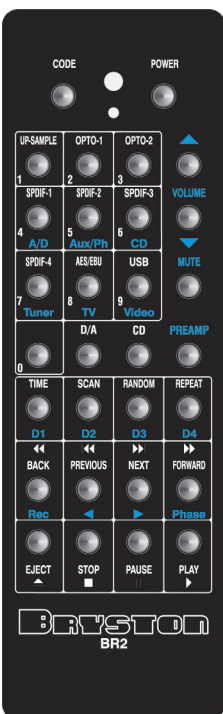

The Bryston model BR2 hand-held infra-red remote control is available for use with the BP17. The BR2 can also control many other Bryston pre-amps and power amps. It features a solid machined aluminum enclosure and push-buttons and a back-lit button panel that will turn both ON (motion triggered) and OFF (inactivity timeout) automatically.

When used with the BP17 the BR2 remote allows selection of all sources, volume up or down (the volume control is a motor-driven design), mute, left/right balance, power on/off and discrete code entry.

We recommend maintaining a direct line-of-sight between the hand held remote unit and the front of the BP17 to ensure the most efficient operation of the remote features.

PROGRAMMING the BR2 REMOTE

The automatic motion-sensing backlight function in the optional BR2 handheld infra-red remote control unit can be disabled by entering the 3 digit code “792” as follows:

- 1) Press and hold the **CODE** button for 5 seconds. Release when the LED flashes red.
- 2) After the LED stops flashing, enter the 3 digit code “792” by pressing the buttons **D1**, **D3** then **AUX/PH**
- 3) To re-enable the motion-sensing backlight function, repeat steps 1 and 2 above

To completely disable the backlight, enter the 3 digit code “797” as follows:

- 1) Press and hold the **CODE** button for 5 seconds. Release when the LED flashes red.
- 2) After the LED stops flashing, enter the 3 digit code “797” by pressing the buttons **D1**, **D3** then **D1**
- 3) To re-enable the backlight repeat steps 1 and 2 above

SENDING CODES to the BP17 via the BR2 REMOTE CONTROL:

Press the CODE button on the remote control (the red LED will light) and then enter the 3 digit code, as listed in the “Wired RS-232 Remote Control” section” below. The LED will flash to confirm transmission and then extinguish.

000: power off	058: mute on
001: select analog source 1 (A/D)	059: mute off
002: select analog source 2 (AUX/PH)	061: record monitor toggle
003: select analog source 3 (CD)	062: record monitor on
004: select analog source 4 (TUNER)	063: record monitor off
005: select analog source 5 (TV)	081 - select digital source 1 (D1)
006: select analog source 6 (VIDEO)	082: select digital source 2 (D2)
007: volume up	083: select digital source 3 (D3)
015: power on/off toggle	084: select digital source 4 (D4)
008: volume down	245: set/reset BYPASS mode
019: balance left	247: Set Trigger 2 for current source
020: balance right	248: Clear Trigger 2 for current source
029: power on	255: System reset; restore defaults

WIRED RS-232 REMOTE CONTROL

Using the DB9 female connector at the rear of the unit, the BP17 can receive commands via a null modem cable at 9600 baud, 8 data bits, no parity and 1 stop bit (9600,8,N,1). Valid commands will return the ">" character indicating that the unit is ready to receive a new command. An invalid command will return the "!" character. These serial data commands are as follows:

BYPASS MODE

BYPASS mode (also referred to as *Pass Through* mode) sets the pre-amp gain to 1 (unity gain) and locks out the volume & balance controls for any single analog audio source. For example, if the Front Left and Front Right outputs of a home theater surround sound processor were connected to the **TV** input of the BP17, and then **BYPASS** was engaged then wherever **TV** input is selected the volume and balance controls would be locked at unity gain. If other inputs were subsequently selected, volume and balance controls return to normal operation for those other input sources. Only the TV inputs would be locked at unity gain. **BYPASS** mode, therefore, can only be assigned to one input at a time, but that input can be any one of the analog audio inputs. **BYPASS** mode can only be set (or reset) by sending the 3 digit code "245" to the BP17 either from the handheld IR remote control or via the RS-232 serial data input. See "Sending Codes to the BP17 via the IR Handheld Remote Control" & "Wired RS-232 Remote Control". To reassign **BYPASS** mode to a different input source simply select the desired input and re-send the "245" code to the BP17. To turn the deactivate **BYPASS** mode, select the current **BYPASS** input and then send the "245" code to the BP17. The "245" toggles **BYPASS** mode on and off.

D/A CONVERTER OPTION

The BP17-DA comes equipped with stereo Digital-to-Analog converter (D/A or DAC) module. This module is also retrofittable to standard BP17 units.

A unique feature of the BP17-DA is its ability to utilize up to four independent digital sources (two SPDIF and two TOSLINK). These four digital inputs can be accessed by selecting **D1**, **D2**, **D3** and **D4** sources with the DAC feature enabled (by pressing the **DIGITAL ▶ Select** button on the left end of the front panel).

Activate the DAC feature by pressing the **DIGITAL ▶ Select (AUX 2)** button on the left side of the front panel (or **A/D** on the remote). The LED below the **DIGITAL ▶ Select** button will turn Green. Pressing any

of the following four buttons will cause their LEDs to light green, as well, to indicate a PCM digital source is present and connected properly.

- SPDIF 1 is accessed by selecting **D1** on the front panel or the remote.
- SPDIF 2 is accessed by selecting **D2** on the front panel or the remote.
- Optical 1 is accessed by selecting **D3** on the front panel or the remote.
- Optical 2 is accessed by selecting **D4** on the front panel or the remote.

The source LED's will turn GREEN when a PCM digital bit stream is present. If there is no bit stream available or an incorrect bit stream (non-PCM) the LED will turn RED.

You may re-select Analog by simply depressing the **DIGITAL ▶ Select (AUX 2)** button once more and the LED will extinguish.

All of the above functions are available from the hand held remote control as well .

MOVING-MAGNET PHONO OPTION:

The BP17-P contains a *moving magnet* phono stage. The Phono Stage is modular and can be added to the standard BP17 model later if required by your Bryston dealer.

Bryston's MM Phono section features state-of-the-art accuracy in equalization, extremely low noise and distortion, and provides headroom margins sufficient to prevent overload from any known phono source. To access the Phono section simply plug your left/right turntable interconnect leads into the left/right **AUX-1/PHONO** inputs on the rear panel of the BP17 and press the **AUX-1/PHONO** button on the front panel. The **AUX-1/PHONO** LED will turn green. If your turntable provides a separate ground lead, system noise may be minimized by connecting it to the ground lug in the center of the rear panel.

BP17 SPECIFICATIONS:

Frequency response:	20Hz to 20KHz, \pm .05dB
IMD or THD:	< .005%
High Level Sensitivity:	500mV
Noise:	-95dB @ 20Hz to 20KHz (ref: 1V input)
Weight:	16 lbs (7.3Kg) with packaging, 11 lbs w/o
Dimensions:	17" or 19" wide X 4.55" high x 14" deep 433mm or 483mm X 116mm X 353mm
Weight:	with packaging approx. 16 lbs (7.3kg.) without packaging approx. 11 lbs (5kg)

INPUT SELECT BUTTONS ~ DIGITAL MODE (BP17-DA only)

When the LED above the **AUX-2 (DIGITAL ▶ Select)** switch is illuminated green concurrently with either the **D1 (CD)**, **D2 (TUNER)**, **D3 (TV)** or **D4 (VIDEO)** LEDs, the unit is in **DIGITAL MODE**. The **D1, D2, D3** or **D4** buttons are then used to select one of the 4 digital audio inputs. Press the **D1** button: **SPDIF 1** source is selected. Press the **D2** button: **SPDIF 2** source is selected. Press the **D3** button: **TOSLINK 1** source is selected. Press the **D4** button: **TOSLINK 2** source is selected.

INPUT SELECT BUTTONS ~ ANALOG MODE


When only one of the source select LEDs is illuminated the unit is in **ANALOG MODE**. The name under the button is the source selected. Exceptions are as follows:
 In BP17-P models, the **AUX-1/PHONO** LED indicates that the **moving-magnet phono** input is selected.
 In BP17 & BP17-DA models the **AUX-1/PHONO** LED indicates that the analog audio **AUX-1** input is selected.

POWER BUTTON & LED

This button toggles the power on & off. The LED indicates the following:
GREEN: normal operation
RED: standby
Blinking RED : receiving valid data
Blinking RED/GREEN: fault

BYPASS LED

Indicates that the selected input is in **BYPASS** mode wherein the gain is set to unity (0dB)

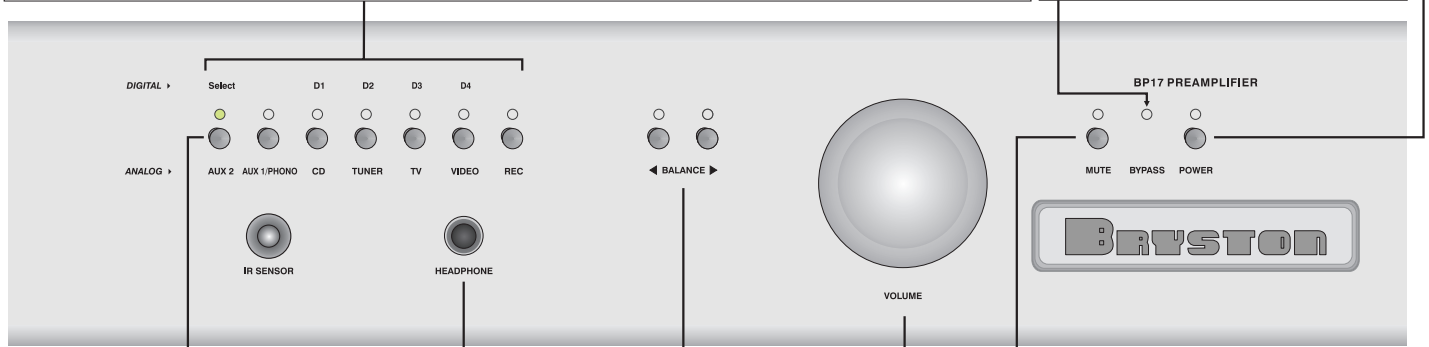

DIGITAL ▶ Select (AUX 2) BUTTON

In BP17-DA models, pressing this button switches between Analog and Digital Input modes. See notes above and in "CONNECTIONS" section of this manual.
 In BP17 & BP17-P models, this button selects the line level analog audio **AUX-2** input.

1/4" STEREO (3 conductor) HEADPHONE JACK.

It is recommended that this jack be used only with headphones having >50 ohms impedance. Plugging in a 1/4" phone plug will automatically mute the power amplifier outputs and the MUTE led will illuminate red.

BALANCE CONTROLS

Adjusts the left versus right channel levels. Pressing the left (◀) or right (▶) buttons will attenuate that channel by 1 decibel for each press of the button. When either channel is attenuated this way, the LED above the affected channel will be illuminated green. Pressing the button a 7th time will cause that channel to fully mute and the LED above the button will light red. The balance control does not affect the **RECORD OUT** outputs.

MOTORIZED VOLUME CONTROL

Can be operated manually or via the remote control.

MUTE CONTROL

Pressing this button mutes both channels fully and the LED lights red. Pressing the button again releases the mute condition and the LED extinguishes. The mute control does not affect the **RECORD OUT** outputs or the headphone outputs.

3 PIN XLR MALE CONNECTORS ~ BALANCED OUTPUTS

"RCA" JACKS


Unbalanced or single-ended input (impedance 10KS) & outputs

ANALOG/DIGITAL DUAL MODE INPUTS

In BP17-DA models, equipped with a D/A converter module, these two jacks accept SPDIF serial data input signals. In other, non-digital, models (BP17 & BP17P) these jacks accept only analog audio signals.

TOSLINK optical data input connectors.

These optical digital TOSLINK inputs are only active in BP17-DA models.

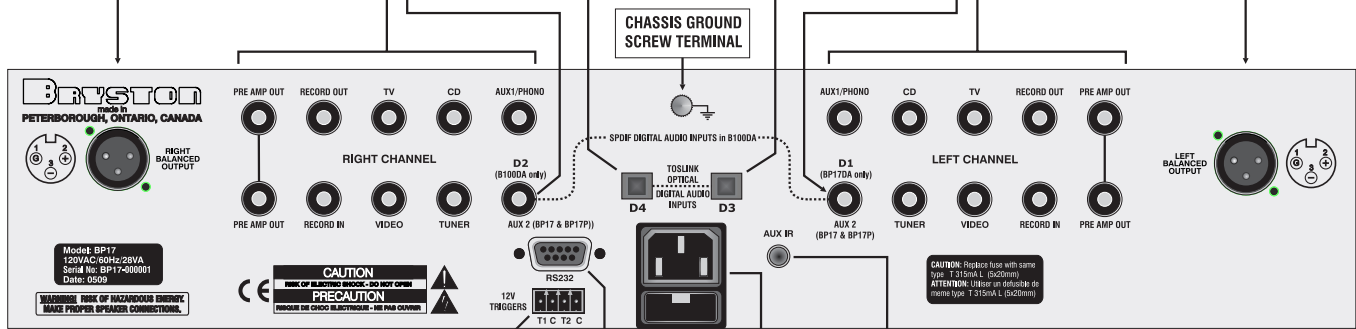

12V REMOTE TRIGGER CONNECTOR

A 12Vdc signal appears across the T1~C terminals whenever the BP17 is ON. A 12Vdc control signal also appears across the T2~C terminals whenever a pre-programmed input source is selected. Refer to "Programming the 'T2' 12v Trigger Output" and "Remote Power Control ~ 12 Volt Trigger Connector" in the "BP17 Owner's Manual" for more information.

RS232 JACK

For remote control from computer or other suitably equipped controllers such as Crestron & AMX

FUSE DRAWER

Accepts one 5mm X 20mm fuse. Replace only with same type of fuse listed on adjacent label. Always remove power cord before opening fuse drawer.

IEC-320 POWER INLET


Use only approved IEC-320 power cords.

AUX IR Input

For connection to infra-red LED drive circuits of compatible remote control equipment. Tip of the 1/8" (3mm) 2 conductor phone plug is positive (+) and the ring is negative (-). Input signal should be ≥2.5Vdc and ≤10Vdc

BP17 PREAMP

EXTERNAL DIMENSIONS & CLEARANCE ENVELOPE

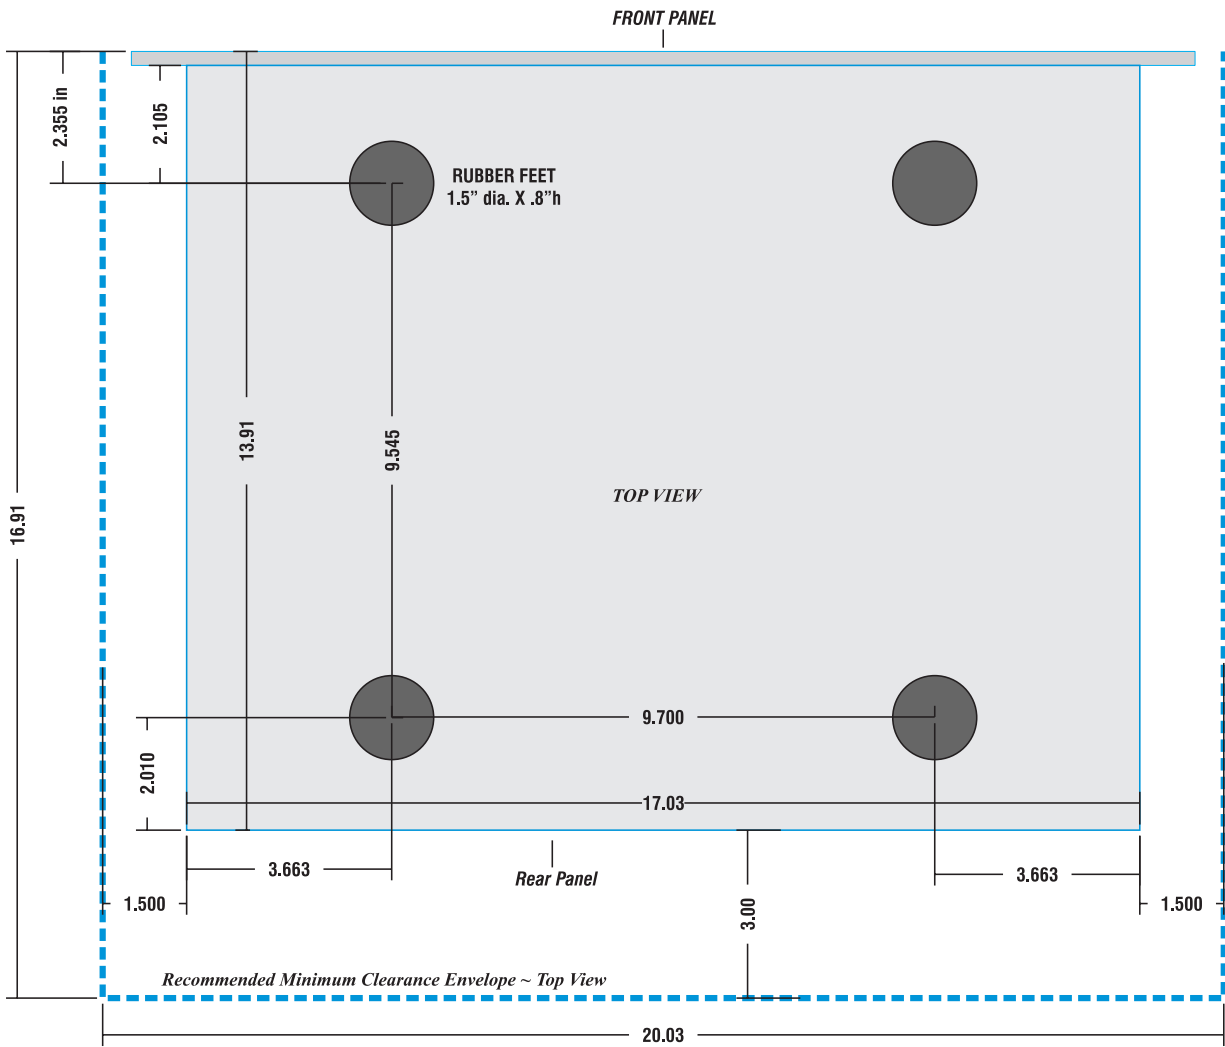

N.B. THIS DRAWING SHOWS A UNIT WITH A 19" WIDE DRESS PANEL. For units with 17" dress panels subtract 1 inch from either end of the 19 inch panel dimensions. ALL DIMENSIONS ARE IN INCHES

