



1. Master Volume: Turn to adjust the overall output of the speaker.

With no Bluetooth connection:

- Press knob to toggle between Bluetooth and line input.
- Press knob and hold (1 second) to turn power on

With Bluetooth connection:

- Press knob to pause or resume playback (play/pause)
- Double press knob to skip to next song (forward)
- Press knob and hold to skip to previous song (back)

2. Treble: Treble EQ adjustment. 2,000 Hz shelf filter adjustable from -6 dB to +6 dB

3. Mid/High Level: Adjusts the output of the midrange and high frequency speakers

4. Sub Low Pass Filter: Variable from 80 Hz to 250 Hz

5. Sub Level: Adjusts the output of the subwoofer

6. High Pass Switch: Turns on/off a 6 dB/octave high pass at 150 Hz on the stereo outputs (towards the edge of the board for on)