


Installation Instructions

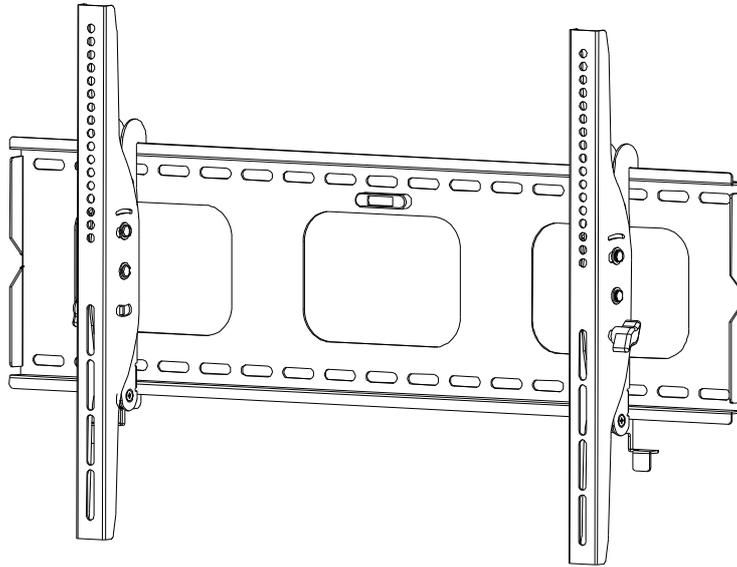

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts. If you are missing an item or feel you have damaged parts contact your place of purchase
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read these instructions before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please arrange to have a qualified installation contractor for help if you:

- If you don't understand these directions or have any doubts about the safety of the installation.
- If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product... Should you have additional questions, please contact your place of purchase.



WARNING

CAUTION!

This TV mount must be securely attached to the wall. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.

Tools Required


- 3/16" Drill Bit
- Phillips Screwdriver

- 1/2" Masonry Bit
- Stud Finder


- Wrench or Socket Set
- Carpenter's Level

Note: The mounting components and hardware supplied in this package are not designed for installations to walls with steel studs or to cinder block walls. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.


Supplied Parts List



(1)Wall Plate-a



(1)Left Monitor Bracket-b



(1)Right Monitor Bracket-c




(4)M4x12 Bolt-d



(4)M5x12 Bolt-e



(4)M6x12 Bolt-f




(4)M8x16 Bolt-g




(4)M4x30 Bolt-h



(4)M5x30 Bolt-i

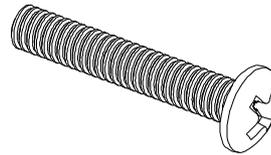

(4)M6x35 Bolt-j

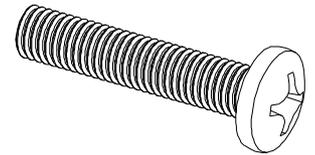

(4)M8x40 Bolt-k



(4)M4 Lock Washer-l



(4)M5 Lock Washer-m




(4)M6 Lock Washer-n




(4)M8 Lock Washer-o




(4)M4/M5 Space-p

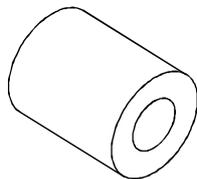


(4)M6/M8 Space-q

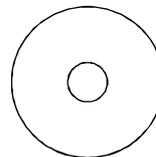


(8)M4/M5 Washer-r

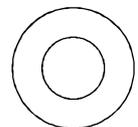


(4)M6/M8 Washer-s




(6)Lag Bolt-t

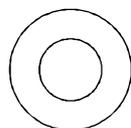

(6)Lag Bolt Washer-u

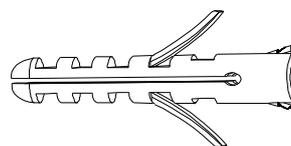

(6)Concrete Anchor-v

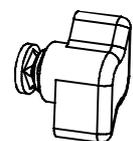


(2)Lock Down Knob-w

Step 1A

Mounting the Monitor Brackets to a TV with Flat Back


First of all, locate the mounting holes found on the back of your TV. Next determine the diameter of the Bolt(d,e,f,g) your TV requires. Once you have determined the correct diameter, please see the relative diagram as below. You will thread the Bolt into the TV using the correct Lock Washer(l,m,n,o) and Washer(r,s). Please make sure the Monitor Brackets(b,c) are vertically centered and level with each other.

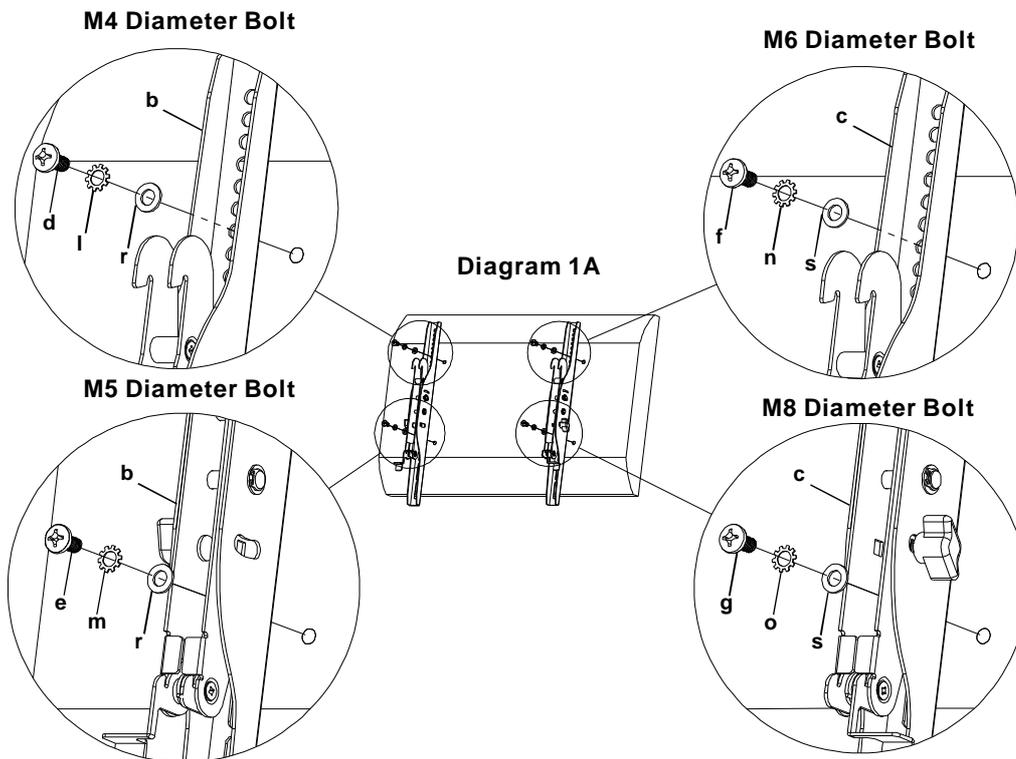

Step 1B

Mounting the Monitor Brackets to a TV with Curved Back

First of all, locate the mounting holes found on the back of your TV. Next determine the diameter of the Bolt(h,i,j,k) your TV requires. Once you have determined the correct diameter, please see the relative diagram as below. You will thread the Bolt into the TV using the correct Lock Washer(l,m,n,o), Washer(r,s) and spacer(p,q). For the M4 or M5 diameter bolt, you will need another M4/M5 Washer between the Monitor Bracket and the Spacer. Please make sure the Monitor Brackets are vertically centered and level with each other.

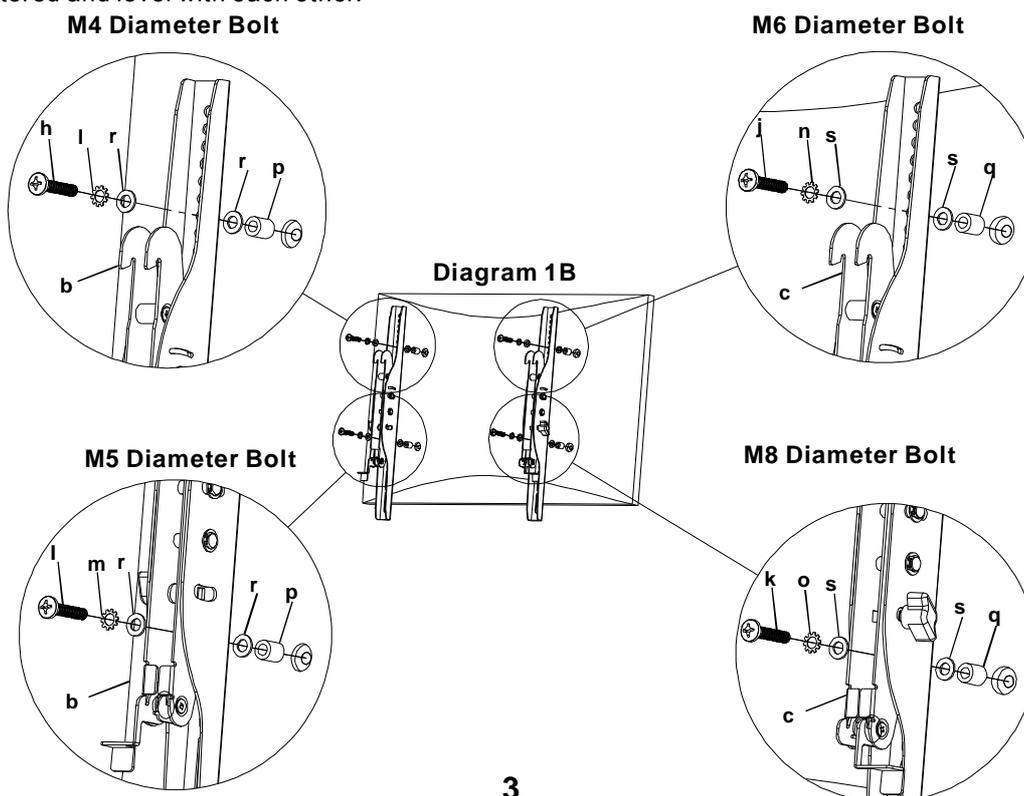

Step 2

Mounting the Wall Plate to the Wall

Brick, Solid Concrete and Concrete Block mounting:

Use the Wall Plate(a) as a template to mark 6 hole locations on the wall. Three in the top row of slots and three more in the bottom row. Make sure these holes are level and there is at least 6" distance between any two holes. Pre-Drill these holes with a 1/2" masonry bit to at least 2.5" in depth. Insert a Concrete Anchor(v) into each of these holes. Make sure the anchor is seated completely flush with the concrete surface even if there is a layer of drywall or other material in front. Attach the Wall Plate to the wall using 6pcs Lag Bolts(t), 6pcs Lag Bolt Washers(u) and 6pcs Concrete Anchor(v), shown in Diagram 2A.

Wood Stud mounting:

The Wall Plate(a) **must be mounted to two wood studs at least 16" apart**. Use a stud finder to locate two adjacent studs. It is a good idea to verify where the studs are located with an awl or thin nail shown in Diagram 2B. Pre-drill a 2.5" deep hole at the desired height in each stud using a 3/16" drill bit. Make sure these holes are in the center area of the studs and level with each other. Use the Wall Plate as a template to mark the location of the second hole in each stud. Drill 2.5" deep holes using the 3/16" drill bit in the marked locations. Attach the Wall Plate to the wall using the 4pcs Lag Bolts(t) and 4pcs Lag Bolt Washers(u).

Diagram 2A


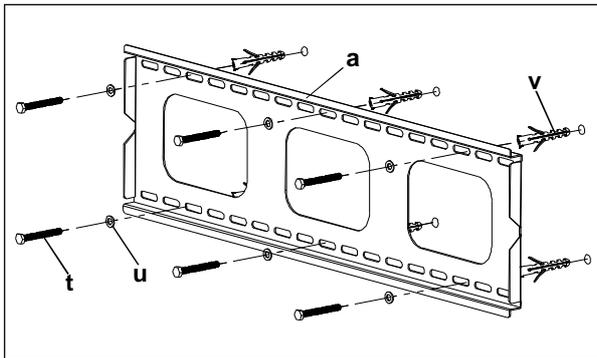


Diagram 2B

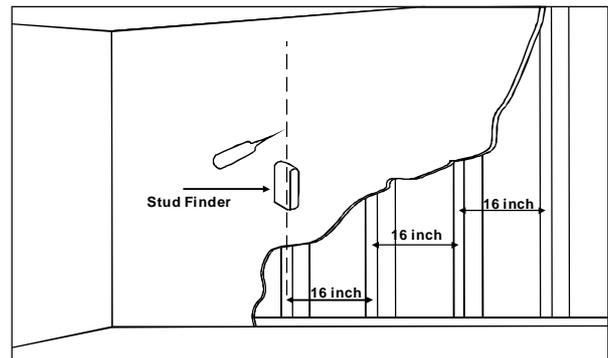

Step 3

Attaching Monitor to Wall Plate and using the RailClip™ Safety Feature

Warning: Some TVs may require two people to lift! We are not responsible for personal injury or product damage.

First, lift the monitor to a level where you can hook the Monitor Brackets(b,c) over the top rail of the wall plate(a). Slowly allow the bottom of the Monitor Brackets(b,c) to touch and then rest on the bottom rail of the Wall Plate(a). Using your index fingers, pull the RailClip™ "triggers", this will allow the Monitor Bracket to move closer to the Wall Mount. Release the RailClip™ "triggers" when you feel and examine that the clip has moved over the bottom rail of the Wall Plate. This will securely clip and fasten your TV to the bottom rail of the Wall Plate(a), as shown in the Diagram 3A. Your Monitor Brackets will sit behind the bottom rail of the Wall Plate as shown in the Diagram 3B. If your set is large, you may require additional help to attach the RailClip™ to the bottom rail of the Wall Plate(a).

Locate the Lock Down Knobs(w) located on the outer side of each Monitor Brackets(b,c), adjust to your desired viewing angle and tighten them to maintain the position. Once your set is in the viewing angle you prefer, you can begin connecting the cable and wiring to your TV. If you need to remove the mount from the Wall Plate, simply reverse the flow of these directions. You can fine tune the angle of viewing any time by unloosening the Lock Down Knobs, adjusting the viewing angle and retightening. Your installation is now complete!

Diagram 3A


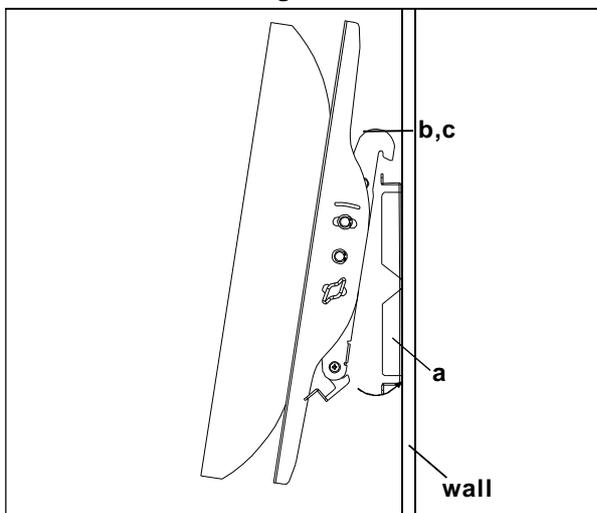


Diagram 3B

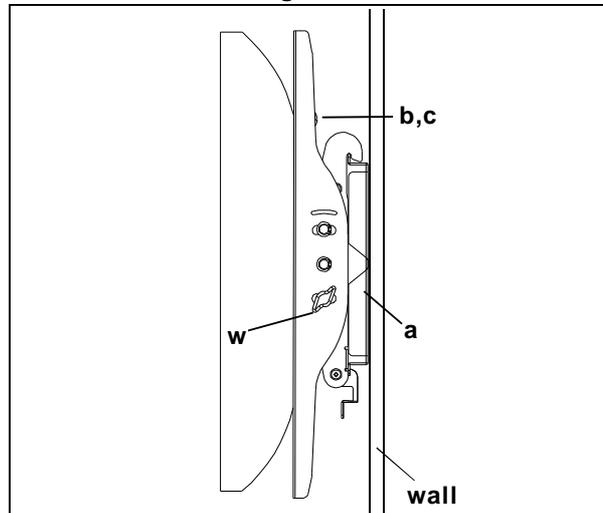

Thank you for choosing Dayton Audio Shadow Mounts.